






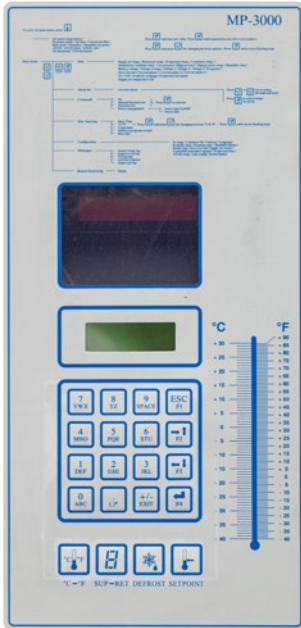


# ÄNDERUNG DES TEMPERATURWERTES

## THERMO KING – MP-3000 STEUERUNG



1. Schalten Sie das Kühlaggregat ein, indem Sie den Kipphebel **UNIT ON/OFF** links neben dem Bedienfeld betätigen.
2. Drücken Sie die  Taste.
3. Drücken Sie die  oder  Taste um zu **TEMP SETP** gelangen.
4. Drücken Sie die  Taste.
5. Drücken Sie die  Taste und geben Sie dann den gewünschten Wert über das Nummernfeld ein.
6. Drücken und halten Sie die  Taste bis der Cursor aufhört zu blinken. Der neu eingestellte Wert erscheint am LCD-Display.
7. Drücken Sie die  Taste um das Menü zu beenden.




### Kühlcontainer-Hotline:








DE +49 8654 / 409 39 90

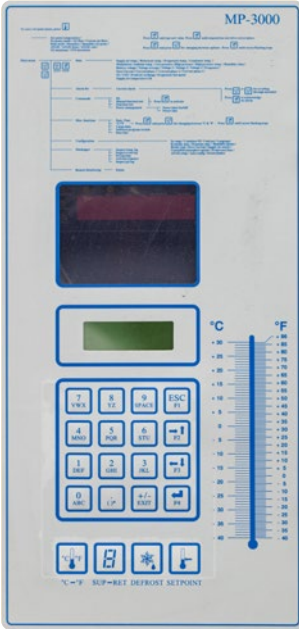AT +43 662 / 260 550

# CHANGE OF TEMPERATURE SETPOINT

## THERMO KING – MP-3000 CONTROLLER



1. Turn on the unit by toggling the **UNIT ON/OFF** switch on the left side of the user interface.
2. Press the  key.
3. Press the  or  key to scroll to **TEMP SETP** line.
4. Press the  key.
5. For a minus setpoint, press the  key first. Type the new temperature setpoint in using the general purpose keypad.
6. Press and hold the  key until the cursor stops flashing. The new setpoint appears in the LCD display.
7. Press the  key to exit the menu.

### Reefer Hotline:

DE +49 8654 / 409 39 90

AT +43 662 / 260 550